

One-Click® Cleaner

Features

- Removes dust and oil adhering to the ferrule endface of fiber optic connector with one push mechanical action.
- Cleans the ferrule endface inside an adapter or connectors on jumpers by making full use of guide cap.
- Refrains from transmission error or endface damage by dirty endface.
- Comfortable and user friendly design with one click cleaning.
- Complies with EU/98/2002/EC directive (RoHS).

Applications

- Cleans the ferrule endface inside an adapter or connectors on jumpers and builds reliable networks for Datacom, FTTH, etc. with faster installation of patchcords, pigtailed and field assembly connectors.




Product Name	One-Click Ultra Cleaner 2.5	One-Click Cleaner SC	One-Click Cleaner SC Mini	One-Click Cleaner MU/LC	One-Click Cleaner MU/LC Mini	One-Click Cleaner ODC	One-Click Cleaner M20
Model Number ³	M250-E-CLK-B	SC-CLK-B	SC-MINI-CLK-A	MU/LC-CLK-B	MU/LC-MINI-CLK-A	ODC-CLK-A	M20-CLK-A
Applicable Fiber Optic Connector & Adapter ¹	SC	•	•				
	FC	•	•				
	ST	•	•				
	MU			•	•	•	
	LC			•	•	•	
	φ 1.25 mm Multi-connector (ODC®)					•	
	φ 2.0 mm Multi-connector (SMPTE 304M, etc.)						•
Applicable Polish Type	PC, UPC, APC					PC, UPC	
Type	Enlarged Area	Standard	Mini	Standard	Mini	Standard	Standard
Nozzle Extendability		•		•		•	•
No. of Cleanings	≥ 500 times						
Cleaning Method	Dry (Cleaning the ferrule endface with cleaning cloth, with no chemical or solvent.)						
Dimensions (mm) ²	22.5 W x 33.4 H x 193 L	17.5 W x 17.5 W x 165 L (200 L)	17.5 W x 30.5 H x 104 L	17.5 W x 17.5 W x 173 L (208 L)	17.5 W x 30.5 H x 104 L	17.5 W x 17.5 H x 178 L (213 L)	17.5 W x 17.5 H x 164 L (199 L)
Extended Dimensions							

*1: Limited to the connector endface inside an adapter. *2: Guide cap dimensions and prongs are not included. *3: Last letter indicates model version. This is subjected to change.

Cleaning Example (UPC Polish) with Enlarged Area Type


M250 type can clean wider area of the connector endface.

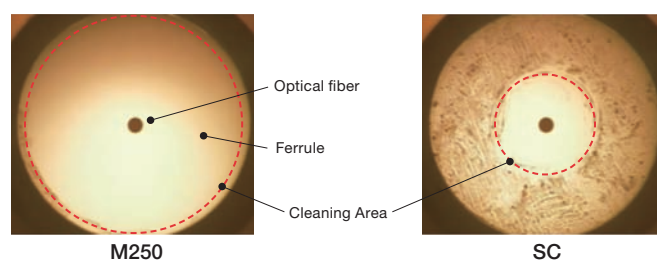

* The above is an example only.

Applications of Mini Type


Mini type is useful when the work space is limited and it is difficult for workers to access to adapters.

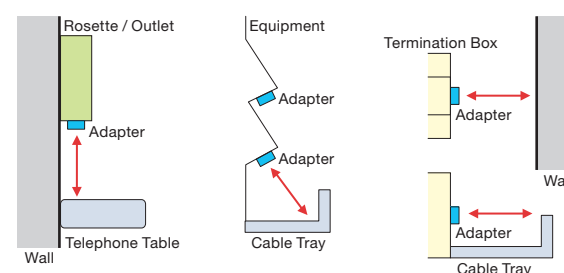

One-Click® Cleaner


How to use*1

To clean the ferrule endface inside an adapter*2

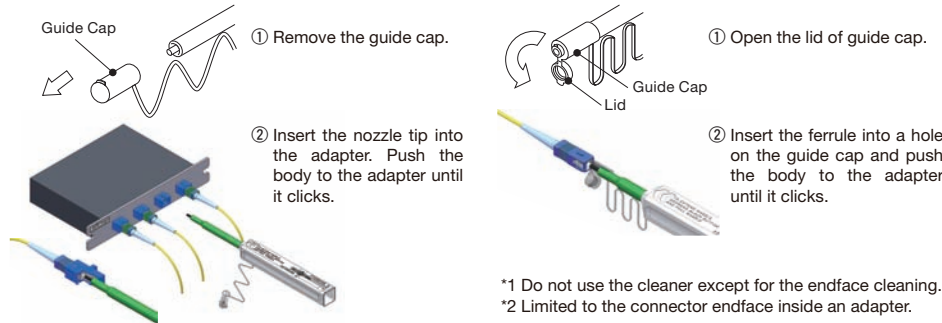

- Points
- 1. Insert the cleaner tip into the adapter or connector on jumpers straight and vertically, and then push it.
- 2. Push it slowly and gently.
- 3. Do not push it after hearing the click sound. Take it out gently and backward.
- 4. Do not squeeze it into the adapter or connector.


Check the remainder of cleaning cloth through window.

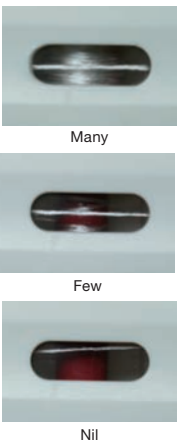

Cleaning Example (UPC Polish)


Enlarged image of endface before and after cleaning

• Cleaning of Oil

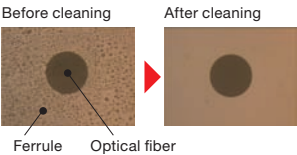


* The above is an example only.

• Cleaning of Dust

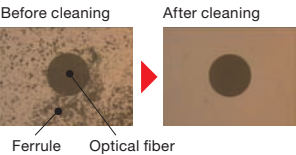

Extension Features of Nozzle (Standard type only)

Nozzle length can be extended if the adapter or connector is not reachable.



Gently pull the nozzle by pressing the unlock button, and then extended.

Multi-fiber Connector Cleaner

MPO-CLK-C / MPX-CLK-A



Product Name	MPO Cleaner	LIGHTRAY MPX Cleaner
Item / Model No	MPO-CLK-C	MPX-CLK-A
Applicable Connector	MPO, MTP®	LIGHTRAY MPX
Polishing method	PC, APC	PC, APC
No. of cleanings	≥ 500 times	

* LIGHTRAY MPX is a trademark of The Whitaker Corporation. MTP is a registered trademark of US Conec Ltd.

Specifications and descriptions are subject to change without prior notice.

Fujikura Ltd.

1-5-1, Kiba, Koto-ku, Tokyo 135-8512, Japan
Phone : +81-3-5606-1164 Fax : +81-3-5606-1534 <http://www.fujikura.co.jp>

Fujikura Asia Ltd.

460, Alexandra Road, #22-01 PSA Bldg., Singapore 119963
Phone : +65-6-271-1312 Fax : +65-6-278-0965 <http://www.fujikura.com.sg>

Fujikura Europe Ltd.

C51 Barwell Business Park, Leatherhead Road, Chessington, Surrey KT9 2NY, UK
Phone : +44-20-8240-2000 Fax : +44-20-8240-2010 <http://www.fujikura.co.uk>

AFL Telecommunications

260, Parkway East, Duncan, SC29334, USA
Phone : +1-800-235-3423 Fax : +1-800-926-0007 <http://www.afttele.com>

Fujikura (Shanghai) Trading Co., Ltd.

16th Floor, Shanghai HSBC Tower, 1000 Lujiazui Ring Road,
Pudong New Area, Shanghai 200120, China
Tel : +86(21)6841-3636 Fax : +86(21)6841-2070

Fujikura (Shanghai) Trading Co., Ltd. Beijing Office

Room No.807, Tower A, Capital Group Plaza, 6,
Chaoyangmen Beidajie 100027, Beijing China
Tel : +86(10)6554-4520 Fax : +86(10)6554-4528

Fujikura Hong Kong Ltd.

Room 801 & 808, Mirror Tower, 61 Mody Road, Tsimshatui East,
Kowloon, Hong Kong
Tel : +852 2366-4823 Fax : +852 2739-0387

Malaysia

Fujikura Asia (Malaysia) Sdn. Bhd.

Suite W403, Wisma Consplant, 2, Jalan SS16/4, Subang Jaya,
47500 Petaling Jaya, Selangor, Darul Ehsan, Malaysia
Tel : +60(3)5636-4368 Fax : +60(3)5636-4377

Indonesia

Fujikura Asia Indonesia office
Equity Tower Building, 35th Floor
Sudirman Central Business District (SCBD)
Jl. Jend. Sudirman Kav. 52-53
Jakarta Selatan 12190, Indonesia
Tel : +62 21 2927b7847 Fax : +62 21 2827 7848

Middle East

Fujikura Middle East Office
King Hussein, Street, Abdali, AQARCO Building 7th Floor, Suite 2
Amman 11192, Jordan
PO Box 923448
Tel : +962(6)566-3226 Fax : +962(6)566-4226

Russia

Fujikura Ltd. Representative Office in Moscow
Leninsky Prospect 45, Entrance 16, Room 450,
Moscow, 119334, Russian Federation
Tel : +7(495)980-7045 Fax : +7(495)980-7046